

Changing & Selecting

Select a new field

Treatment must be OFF Turn off controller switch
 Select any clear memory / field location

FIELD MEMORY RESTART

SELECT OK

Note: This action clears information in selected memory location.

Suspend an uncompleted field

Treatment must be OFF Turn off controller switch
 Select a different virtual memory slot

FIELD MEMORY RESTART

SELECT OK

To finish an uncompleted field

Treatment must be OFF Turn off controller switch
 Select the virtual memory slot to be completed

FIELD MEMORY BACK

SELECT OK

To archive a completed field

Treatment must be OFF Turn off controller switch
 Select the virtual memory slot to be archived

FIELD MEMORY ARCHIVE

SELECT OK

Select a field name from the list or create a new name

BACK OK

Change the swath width (Single Section Boom)

Treatment must be OFF Turn off controller switch
 Enter New Width

FIELD MEMORY RESTART

OK

28.00m

OK

Viewing

Zoom IN / OUT

VIEW IN OUT ALL BACK

North Up / Heads Up

VIEW HEADS UP NORTH UP BACK

GPS details

OK

Day/Night Mode

Display Setup

Night Mode is OFF

EXIT SETUP

Night Mode is ON

FieldNET (optional extra)

Connect to another vehicle

FIELD FIELDNET CONNECT

BACK Select vehicle to connect to

Clear link with another vehicle

FIELD FIELDNET OPTIONS

BACK Highlight linked vehicle on list

Link Type = Hidden

BACK

Import AB points via FieldNET

FIELD FIELDNET IMPORT Current AB

OK Highlight vehicle to import from on list

BACK

BACK

BACK

AutoSPRAY (optional extra)

Turn AutoSPRAY ON/OFF

SETUP AutoSPRAY

AutoSPRAY is OFF

EXIT SETUP

AutoSPRAY is ON

View AutoSPRAY information

SETUP Display Setup

Status Bar Details

% Overlap ON AutoSPRAY Info ON

Toggle (touch) status bar until visible

Covered Area = 0.0 Ha, AutoSPRAY On, AutoSPRAY Override to ON

Overlap = 0.0 Ha (0.0 %)

EXIT SETUP

Override AutoSPRAY

to override ON

to override OFF

OR

to select sections.

AutoSTEER (optional extra)

Turn AutoSTEER ON/OFF

SETUP AutoSTEER

AutoSTEER is OFF

AutoSTEER is ON

Engage AutoSTEER

GUIDE POINT A POINT B PARALLEL

BACK READY

Disengage AutoSTEER

ON

or turn the steering wheel, or stop the vehicle.

Guidance

Racetrack/Contour guidance

Start treatment recording. Drive around perimeter of the field



Parallel guidance


Drive to one end of the field



Drive to other end



Load replay path

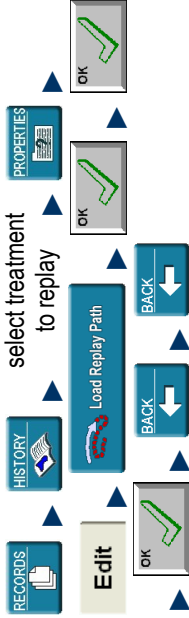

REPLAY guidance

Drive to field



Change Contour Type

set Contour Type to Replay for Replay Guidance or Lock for Racetrack or Contour guidance



Switch guidance OFF



Quick Reference Guide

GuideTRAX software V3.2 (HT)

GuideTRAX main menu



The VIEW menu allows the map display properties to be changed.



The FIELD menu allows paddocks to be started and saved.



The GUIDE menu provides different guidance formations.




The SETUP menu allows the user to customise their configurations.



The RECORDS menu allows the user to view historical information.

GuideTRAX main screen

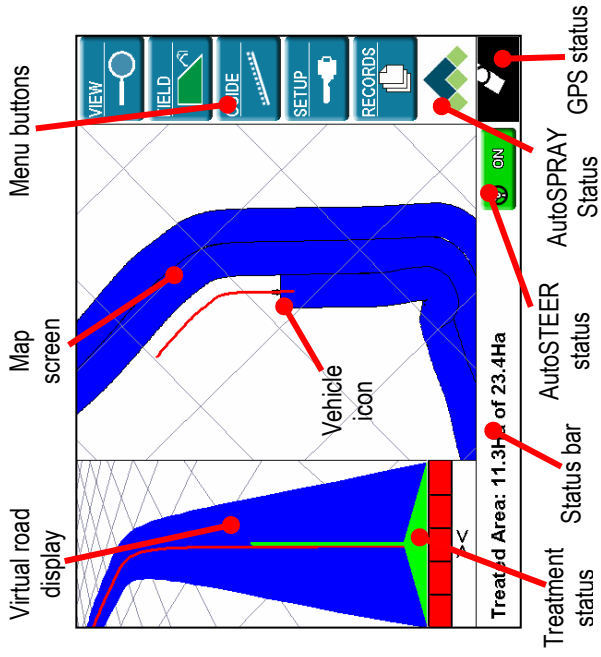

RINEX Part No : 1-1327 Rev A

Issue Date : April 2007



smart guidance ...
...made simple



AUTOSPRAY

AUTOFIELD

Customer Support Centre

Telephone : (08) 9474 4771
Email : support@rinex.com.au

Rinex Technology
ABN : 30 029 441 181
19 Lyall Street South Perth WA 6951
Telephone : (08) 9474 4771
Facsimile : (08) 9474 4772
Internet : http://www.rinex.com.au