

Change & Selecting

Select a new field

Treatment must be OFF Turn off controller switch
 MEMORY Select any clear memory / field location
 RESTART
 Note: This action clears information in selected memory location.

Suspend an uncompleted field

Treatment must be OFF Turn off controller switch
 MEMORY Select a different virtual memory slot
 RESTART

To finish an uncompleted field

Treatment must be OFF Turn off controller switch
 MEMORY Select the virtual memory slot to be completed
 BACK

Change the swath width (Single Section Boom)

Treatment must be OFF Turn off controller switch
 RESTART
 28.00m Enter New Width
 OK

Change the swath width (Multi Section Boom)

Treatment must be OFF Turn off controller switch
 SETUP Vehicle Setup
 RIG SETUP
 BOOM SETTINGS
 OK
 Change Boom Settings
 EXIT SETUP
 FIELD
 OK
 RESTART

Viewing

Zoom IN / OUT

VIEW IN OUT ALL BACK

GPS details

OK

North Up / Heads Up

VIEW HEADS UP NORTH UP BACK

Grid display ON / OFF

SETUP Display Setup Grid is ON OR
 Grid is OFF EXIT SETUP

Treatment status

Treatment recording can be toggled ON / OFF by touching virtual road treatment status or vehicle icon or using RINEX toggle switch

Day/Night Mode

SETUP Display Setup Night Mode is ON OR
 Night Mode is OFF EXIT SETUP

Change Lightbar Intensity

GUIDE MORE LIGHTBAR Dim or brighten
 OK BACK BACK

Shutting Down

Switch off vehicle, system will power down automatically

Guidance

Racetrack guidance

Start treatment recording Turn on controller switch
 Drive around perimeter of the field

GUIDE LOCK BACK

Touch when alongside the starting point

Contour guidance

Start treatment recording Turn on controller switch
 Drive along contour bank in the field

GUIDE LOCK BACK

Touch when alongside existing treatment points

Parallel guidance

Drive to one end of the paddock

GUIDE POINT A PARALLEL POINT B

drive to other end of the field

BACK

Points A & B should be placed first before starting treatment to ensure that the first pass is parallel to points A & B.

Switch virtual road window ON/OFF

SETUP MORE Virtual Road Setup EXIT SETUP

Virtual Road is ON OR Virtual Road is OFF

Switch guidance OFF

GUIDE GUIDE OFF BACK



Quick Reference Guide

GuideTRAX software V3.2 (HL)

GuideTRAX main menu



The VIEW menu allows the map display properties to be changed.



The FIELD menu allows treatments to be started and saved.




The GUIDE menu provides different guidance formations.



The SETUP menu allows the user to customise their configurations.

GuideTRAX main screen

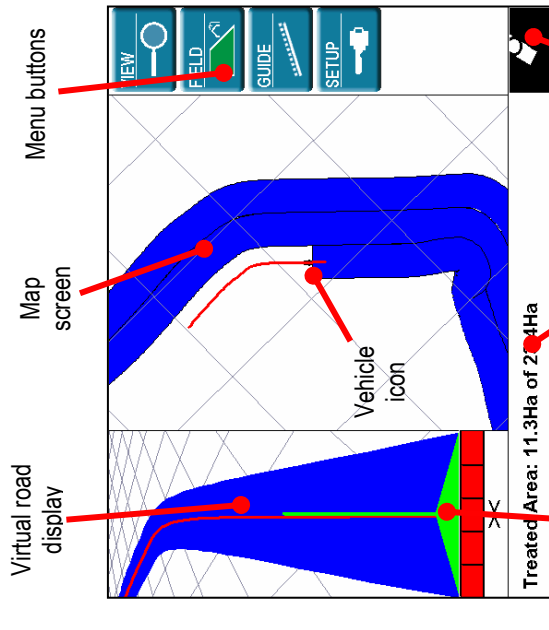

RINEX Part No : 1-1326 Rev A

Issue Date : April 2007



smart guidance ...
 ...made simple



Customer Support Centre

Telephone : (08) 9474 4771
 Email : support@rinex.com.au

Rinex Technology
 ABN : 30 029 441 181
 19 Lyall Street South Perth WA 6951
 Telephone : (08) 9474 4771
 Facsimile : (08) 9474 4772
 Internet : http://www.rinex.com.au