

Changing & Selecting

Select a new field

Treatment must be OFF Turn off controller switch
 MEMORY Select any clear memory / field location
 RESTART
 Note: This action clears information in selected memory location.

Suspend an uncompleted field

Treatment must be OFF Turn off controller switch
 MEMORY Select a different virtual memory slot
 RESTART

To finish an uncompleted field

Treatment must be OFF Turn off controller switch
 MEMORY Select the virtual memory slot to be completed
 BACK

To archive a completed field

Treatment must be OFF Turn off controller switch
 MEMORY Select the virtual memory slot to be archived
 ARCHIVE Select a field name from the list of create a new name
 BACK BACK

Change the swath width (Single Section Boom)

Treatment must be OFF Turn off controller switch
 RESTART 28.000m
 OK Enter New Width
 OK

Viewing

Zoom IN / OUT

VIEW IN OUT ALL BACK

GPS details

OK

North Up / Heads Up

VIEW HEADS UP NORTHUP BACK

Grid display ON / OFF

SETUP Display Setup Grid is ON OR
 Grid is OFF EXIT SETUP

Treatment status

Treatment recording can be toggled ON / OFF by touching virtual road treatment status or vehicle icon or using RINEX toggle switch

Day/Night Mode

SETUP Display Setup Night Mode is ON OR
 Night Mode is OFF EXIT SETUP

Change Lightbar Intensity

GUIDE MORE LIGHTBAR Dim or brighten
 OK BACK BACK

AutoSPRAY

(optional extra)

Turn AutoSPRAY ON/OFF

SETUP AutoSPRAY AutoSPRAY is ON OR
 EXIT SETUP

View treatment overlap (%)

SETUP Display Setup Status Bar Details
 % Overlap ON
 Toggle (touch) status bar until visible
 Covered Area = 0.1 HA,
 Overlap = 0.0 HA (0.9 %)

AutoSTEER

(optional extra)

Turn AutoSTEER ON/OFF

SETUP AutoSTEER AutoSTEER is ON OR
 EXIT SETUP
 AutoSTEER is OFF Restart system

Engage AutoSTEER

GUIDE POINT A POINT B PARALLEL
 BACK READY


Disengage AutoSTEER

ON or turn the steering wheel, or stop the vehicle.

Guidance


Racetrack guidance

Start treatment recording Turn on controller switch
Drive around perimeter of the paddock




Contour guidance

Start treatment recording Turn on controller switch
Drive along contour bank in the paddock



Parallel guidance

Drive to one end of the paddock



drive to other end of the paddock

Points A & B should be placed first before starting treatment to ensure that the first pass is parallel to points A & B.

Switch virtual road window ON/OFF



Virtual Road is ON OR Virtual Road is OFF

Switch guidance OFF



Shutting down GuideTRAX

Switch off vehicle, system will power down automatically



Quick Reference Guide

GuideTRAX software V3.1 (HT)

GuideTRAX main menu



The VIEW menu allows the map display properties to be changed.



The FIELD menu allows paddocks to be started and saved.



The GUIDE menu provides different guidance formations.




The SETUP menu allows the user to customise their configurations.



The RECORDS menu allows the user to view historical information.

GuideTRAX main screen

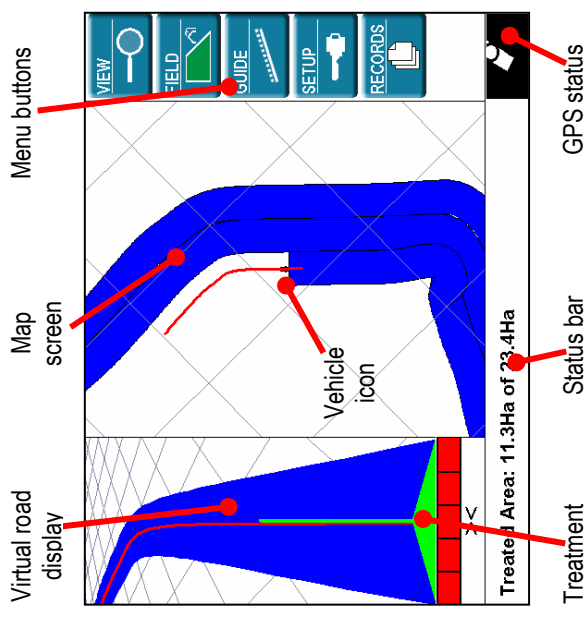

smart guidance ...
...made simple



Customer Support Centre

Telephone : (08) 9474 4771
Email : support@rinex.com.au

Rinex Technology
ABN : 30 029 441 181
19 Lyall Street South Perth WA 6951
Telephone : (08) 9474 4771
Facsimile : (08) 9474 4772
Internet : <http://www.rinex.com.au>

RINEX Part No :
1-1317 Rev A

Issue Date :
March 2006